

**STEERING COLUMN**

- Attach the adjustable column bracket to the mounting tab on the frame cross member behind the dash with a 5 1/6 x 3 1/2" hex head bolt, flat washers on both sides, lock washer and nut.
- With a sabre saw cut a 2 1/2" slot in the fiberglass bulkhead below the rear portion of the gas tank. The center of

this slot is 2 1/2" from the lip of the gas tank cut out.

- Mount steering shaft to steering box with original hardware. Mount steering column to adjustable bracket with 5/16 x 1 1/2" hex head bolts, flat washers, on both sides, lock washer and nuts.

**NOTE:** If your car is equipped with a

**Aggrenox**  
(aspirin/extended-release dipyridamole)  
 25 mg/200 mg capsules

*Column Dia 1.75  
 up from weld flange  
 12 1/4  
 from left edge 5 1/2  
 speed cable*

AG7513R3

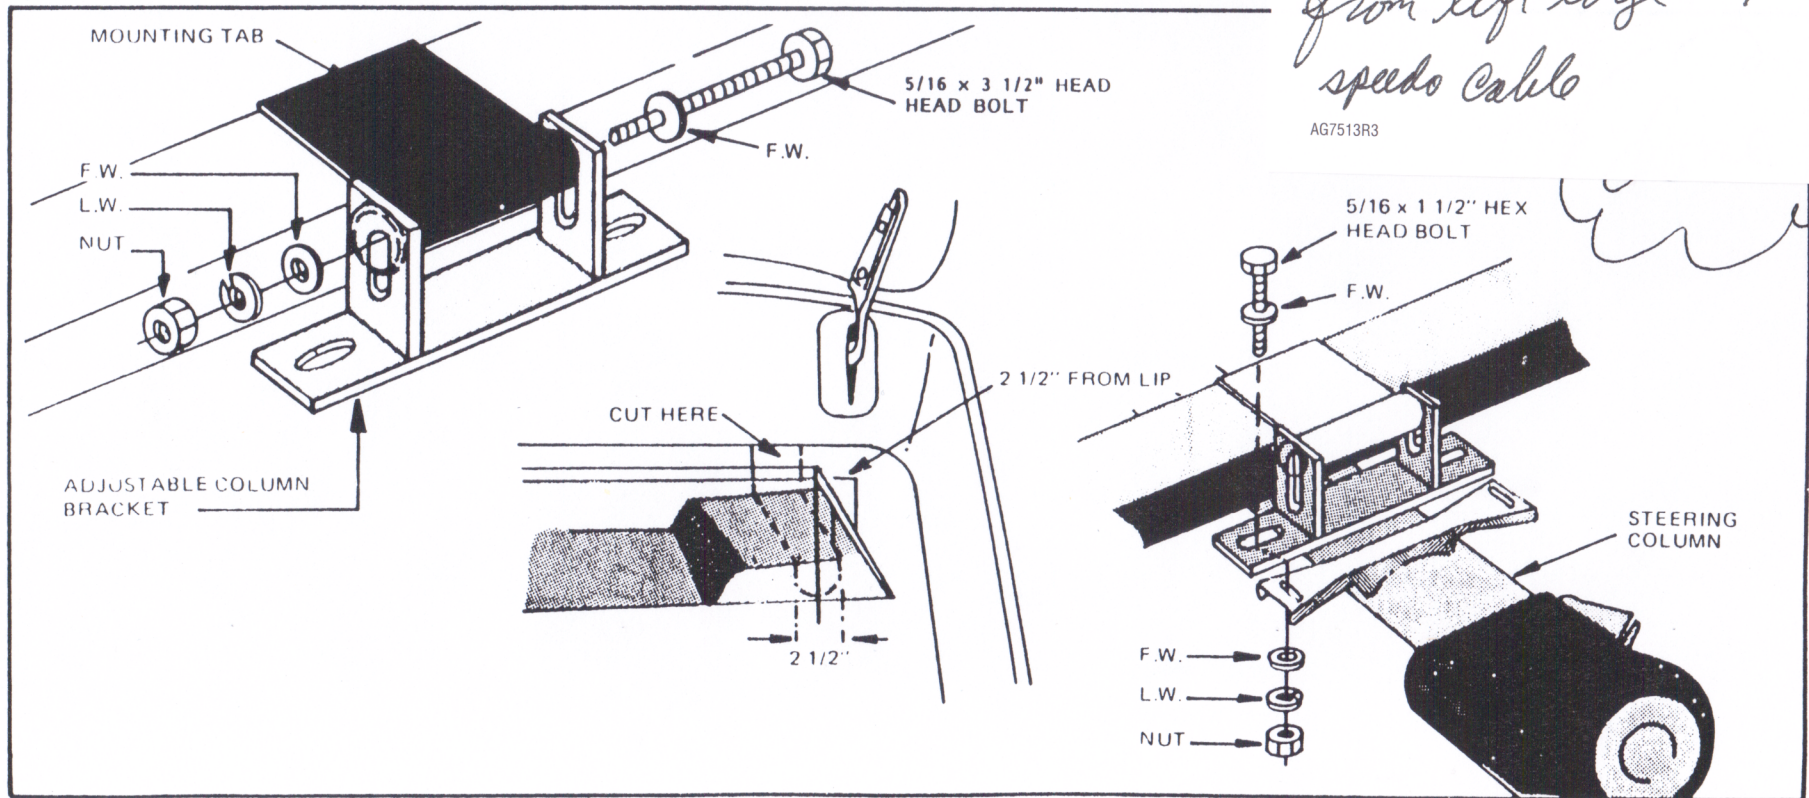


Figure 7